

A

OFF

B₁

F

	F
901778	819±50mm
901779	1080±50mm

B₂

φ6mm

INCLUDE / INKLUSIVE

x2 M4*30 x4 M3*10 x4

	L	W	H	F
901778	1188mm	85mm	81mm	819±50mm
901779	1488mm	85mm	81mm	1080±50mm

C

③

D

①

901778				901779			
ON	ON	ON	ON	ON	ON	ON	ON
1	2	1	2	1	2	1	2
Power 1	Power 2	Power 3	Power 4	Power 1	Power 2	Power 3	Power 4
200mA	250mA	300mA	350mA	200mA	250mA	300mA	350mA
22W	28W	34W	40W	30W	37W	43W	50W
3500lm	4300lm	5000lm	5700lm	4600lm	5700lm	6400lm	7600lm

E

EMERGENCY TERMINATIONS NON-MAINTAINED

30±5mm 8-10mm

Range: 1-2.5mm²

N=Neutral
E=Protective earth
1=Unswitched Live

EMERGENCY TERMINATIONS MAINTAINED

30±5mm 8-10mm

Range: 1-2.5mm²

N=Neutral
E=Protective earth
1=Unswitched Live
Jumper 2=Live

EMERGENCY TERMINATIONS MAINTAINED (SWITCHABLE)

30±5mm 8-10mm

Range: 1-2.5mm²

N=Neutral
E=Protective earth
1=Unswitched Live
2=Live

F

②

G

①

M3*10

H

MAX

901778	25
901779	16

Max

I

ON

EN

Replacement of the battery (lifetime 4 years)

Batteries should be replaced when the luminaire no longer meets the 3 hours duration performance.

- The battery must be replaced with same type and code
- Switch of the electricity at the mains.
- Open the fitting, unplug battery plugs (2pin - white color)
- Remove the old battery pack by screwdriver
- Replace new battery pack then fix it on the iron plate and connect the plugs
- Close the fitting
- Restore the power and perform operation check.

The electrician needs to perform a Self-test function as follows :


- Every month: routine check by press the test button .
- Every year: power off ,then 180 minutes discharge test .
- The luminaire must be installed by a qualified electrician and wired in accordance with the latest IEE Electrical regulations or the national requirements.
- Turn off the power supply before checking, installation, maintenance or moving.
- Do not switch on before complete installation.
- The light source and/or controller contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.
- Batteries shall only be replaced by the manufacturer or his service agent or a similar qualified person.
- The product is not intended for emergency escape purposes

DE

Austausch der Batterie (Lebensdauer 4 Jahre)

Batterien sollten ausgetauscht werden, wenn die Leuchte die 3-Stunden-Dauerleistung nicht mehr erfüllt.

- Die Batterie muss durch denselben Typ und Code ersetzt werden.
 - Schalten Sie den Strom am Hauptschalter aus.
 - Öffnen Sie die Leuchte, ziehen Sie die Batteriestecker ab (2-polig – weiß).
 - Entfernen Sie den alten Batteriesatz mit einem Schraubendreher.
 - Setzen Sie den neuen Batteriesatz ein, befestigen Sie ihn auf der Metallplatte und schließen Sie die Stecker an.
 - Schließen Sie die Leuchte.
 - Stellen Sie die Stromversorgung wieder her und führen Sie eine Funktionsprüfung durch.
- Der Elektriker muss eine Selbsttestfunktion wie folgt durchführen:
- Jeden Monat: Routineprüfung durch Drücken der Testtaste.
 - Jedes Jahr: Ausschalten, dann 180 Minuten Entladetest.
 - Die Leuchte muss von einem qualifizierten Elektriker installiert und gemäß den neuesten elektrischen IEE-Vorschriften oder den nationalen Anforderungen verkabelt werden.
 - Schalten Sie die Stromversorgung vor der Überprüfung, Installation, Wartung oder dem Transport aus.
 - Schalten Sie sie nicht ein, bevor die Installation abgeschlossen ist.
 - Die in dieser Leuchte enthaltene Lichtquelle und/oder Steuerung darf nur vom Hersteller oder seinem Servicevertreter oder einer ähnlich qualifizierten Person ausgetauscht werden.
 - Batterien dürfen nur vom Hersteller oder seinem Servicevertreter oder einer ähnlich qualifizierten Person ausgetauscht werden.
 - Das Produkt ist nicht für Notausgänge vorgesehen.

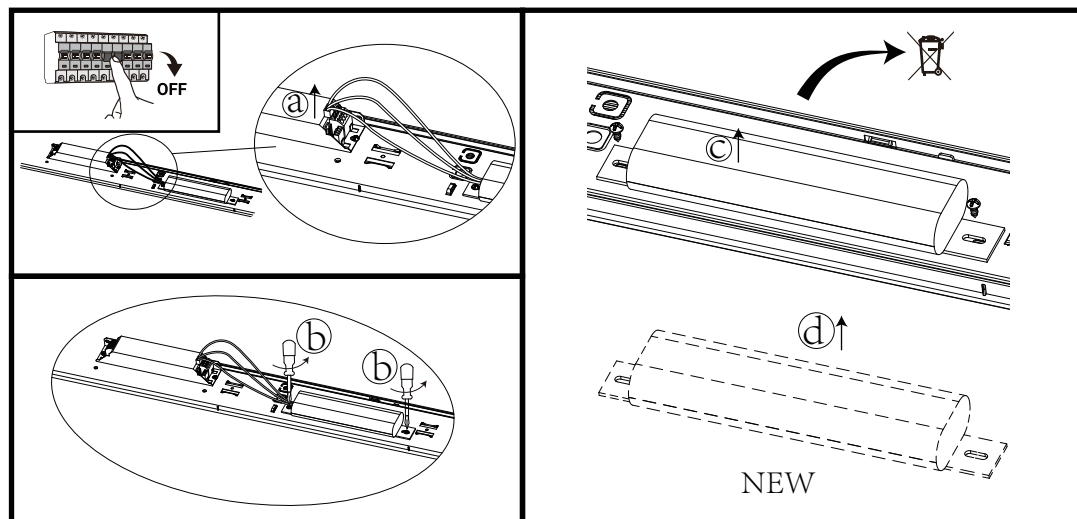

EGLO
my light | my style