

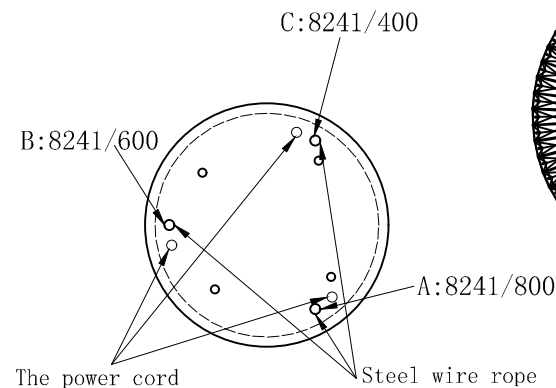


Install the wires from each ring to the corresponding holes in the suction tray from A to C (top to bottom) in the order shown in the drawing.

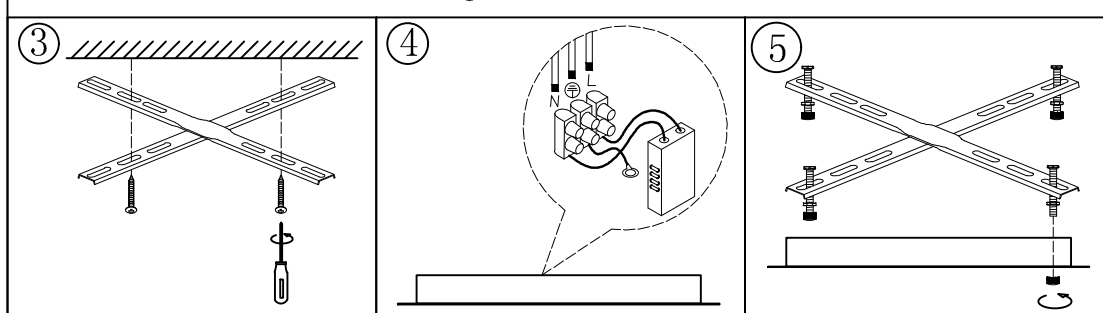

8240/250-3

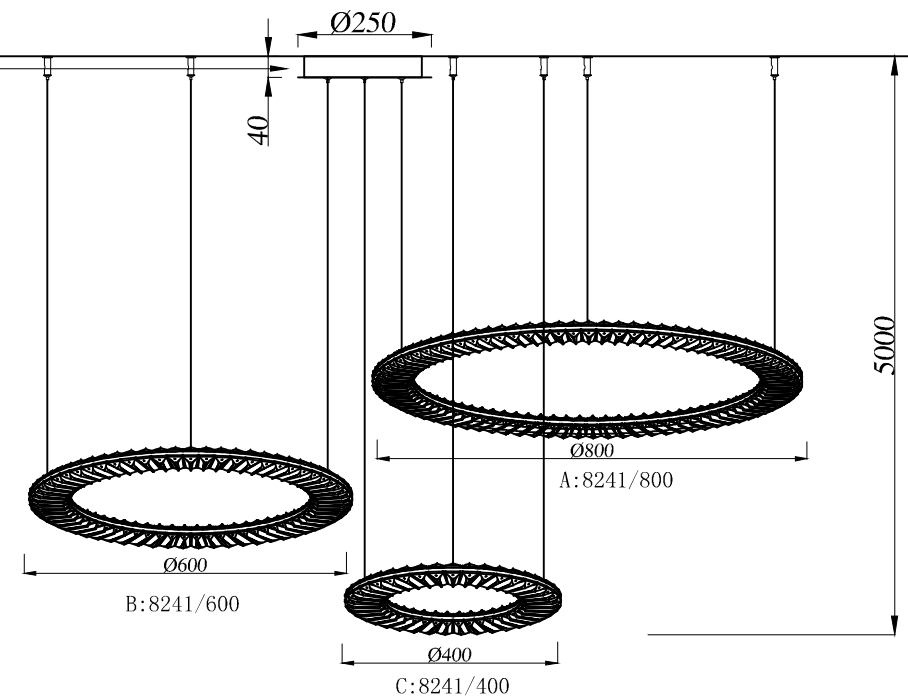

Model:8241/3 Ø250
D80+D60+D40