



Model: 8241/2 $\phi 220$
D80+D60

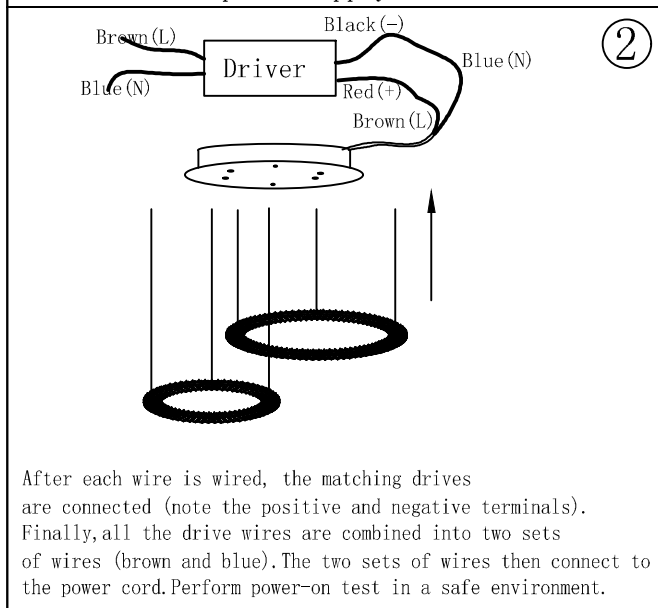

Install the wires from each ring to the corresponding holes in the suction tray from A to B (top to bottom) in the order shown in the drawing.

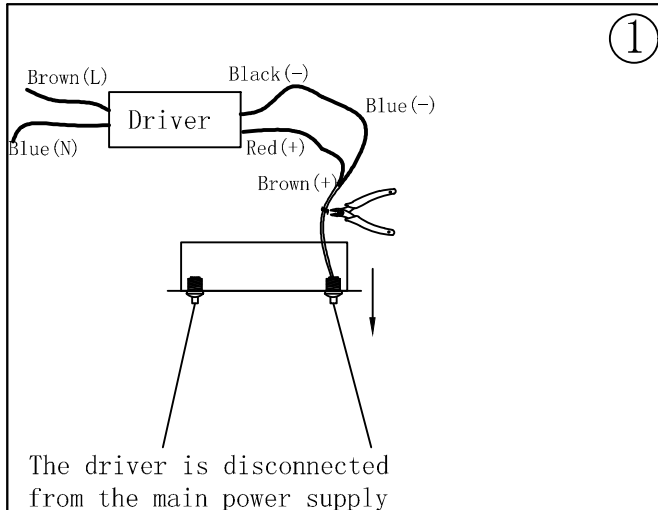